

AARCEE

Party and Tent Rental

Elite Pole Tent - 20'x30', 20'x40', & 30'x40'


Parts List:

Required for 20x30	Required for 20x40	Required for 30x40	
2(14'-2 pc.)	3(14'-2 pc.)	2(18'-1 pc.)	Center poles (1 or 2 pieces per pole)
1	1	1	Vinyl tent top with pre-attached ropes
10	12	18	Wooden perimeter poles
14	16	22	Stakes

*customer supplies sledge hammer

Time required: Two experienced installers should be able to assemble in less than one hour.

Inspect installation site: Prior to assembly, be sure to look above and below for obstacles including power lines, phone lines, sprinkler systems, etc.

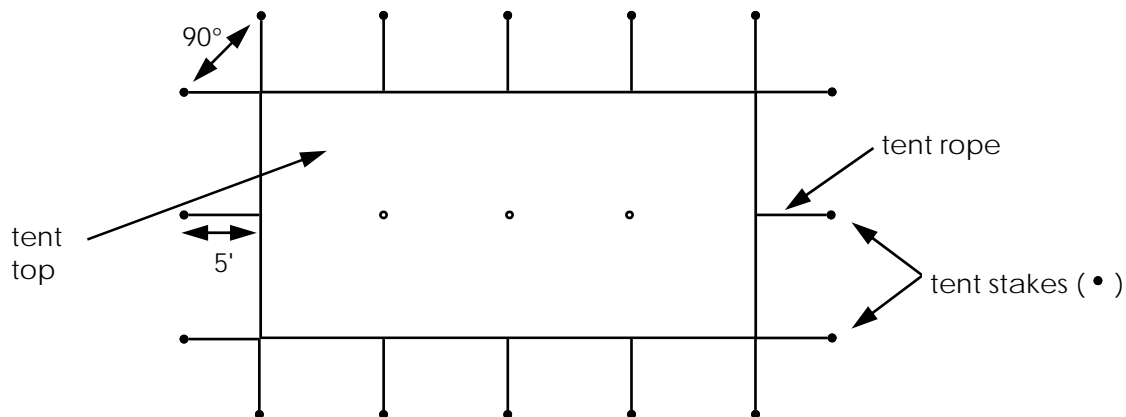

1. POSITION THE TENT

Unroll and unfold the canopy on the exact spot you wish to cover. Try to keep the tent as square and taut as possible. Please do not walk on the tent.

2. HAMMER STAKES IN GROUND

Stretch tent ropes out to their full length. Position stakes approximately 5' from the edge of the tent top and drive stakes into the ground, angling them slightly away from the tent. At each corner, use two stakes 90° apart. Leaving plenty of slack, tie ropes to stakes using the knot pictured in illustration *a1*.

Please call our emergency voice mail at [952-922-7233](tel:952-922-7233) if you experience problems after hours.

3. INSERT CORNER POLES AT ANGLE

Place the metal tips of the wooden side poles through the grommets in the tent top. Stand the corner poles up part way, angling the bottom of the pole in toward the tent (*Illustration a*).

4. TIE JUMP ROPES

There is a small rope called a 'jump rope' attached to each grommet in the tent top, including the center hole. Tie these ropes around the side poles and center pole as each pole is inserted (*Illustration b*). These ropes prevent the poles from falling down in strong winds.

5. INSERT CENTER POLE TO VERTICAL

Fit the two pieces of the center pole together. Place the tip of the center pole through the center grommet in the tent top and lift the pole into vertical position (*Illustration b*). Make sure the tip of the center pole does not puncture the tent fabric while lifting. Loosen side ropes if you have difficulty lifting the center pole into fully vertical position.

6. STAND CORNERS & ADJUST TENSION

Straighten corner poles to an almost vertical position. If perimeter of canopy is not taut, lower a corner pole far enough to relax the tension on that corner. Tighten the rope on the stake and raise the corner pole again. Repeat this adjustment at other corners until perimeter is taut (*Illustration c*).

7. STAND REMAINING SIDE POLES

Set up the remaining wooden side poles so the bottom of the pole angles into the tent, placing the tips through the grommets in the tent top. Adjust tension on ropes and push side poles into nearly vertical position. Readjust if necessary.

8. TO TAKE DOWN TENT:

Angle side poles to release tension, then angle corner poles. Angle and remove the center pole. Remove all perimeter poles. Untie ropes and remove stakes by hitting the side of the stake with a sledge hammer. Fold fabric and place in tent bag.

